TELESCOPING VIDEO INSPECTION DEVICE

INSTRUCTION MANUAL

MODEL 2198



injektor solutions
www.termometer.se


Svensk återförsäljare
08-7530004, info@termometer.se
Beställ direkt i vår webshop!!
< Klicka för pris & beställning!! >

PLEASE READ & SAVE THIS MANUAL BEFORE USE

FUNCTION INTRODUCTION：


CAMERA

1.LED LIGHTS
2.SPRING
3.CONNECTOR

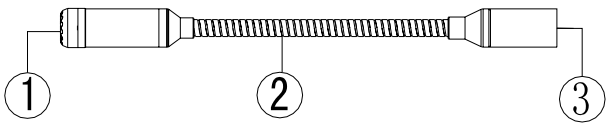


TELESCOPIC ALUMINIUM SHAFT

1. CAMERA CONNECTOR
2. FIRST TELESCOPIC SHAFT
3. SECOND TELESCOPIC SHAFT
4. THIRD TELESCOPIC SHAFT
5. MONITOR CONNECTOR

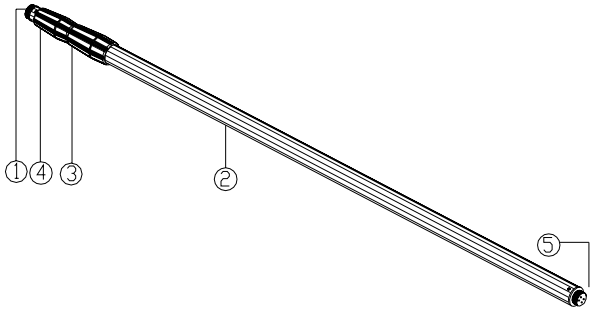

MONITOR


1. MONITOR ON SWITCH
2.MONITOR OFF SWITCH
3.TFT SCREEN
4.BRACKET
5.CABLE
6.MONITOR BRACKET
7.DC-12V INPUT PLUG
8.POWER SWITCH

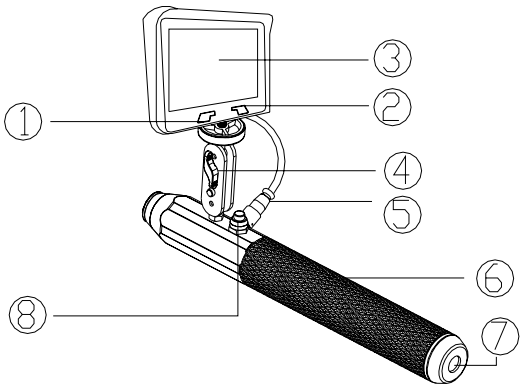

BATTERY AND CHARGE

WHEN POWER LOW, THE POWER SUPPLY WILL BE SHUT DOWN AUTOMATICLY.
CHARGE FIGURE
CONNECTOR

CAUTION:
ONLY USE THE CHARGE INCLUDE IN THE PACKAGE.
DO NOT SHORT CIRCUIT.
DO NOT INCINERATE.
DO NOT DISASSEMBLE.
DO NOT THROW IN THE FIRE.

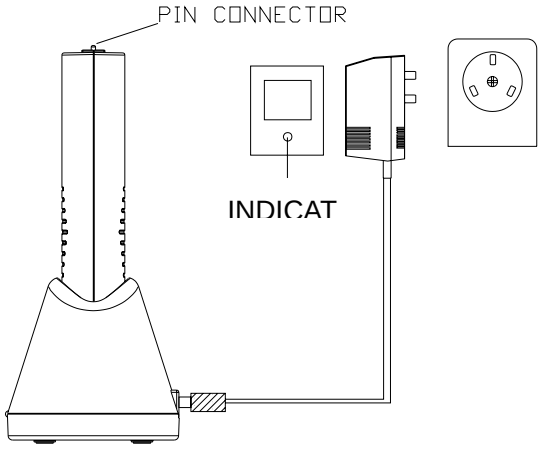

POWER SWITCH RECHARGER,POWER RANGE:AC90V-260V DC 12.8V 800MA
RED INDICATOR POINT CHARGE
GREEN INDICATOR POINT FULL

SPECIFICATION

CAMERA

CAMERA SENSOR	1/4”CCD
LED LIGHT	8 PIECES WHITE LIGHTS
PIXELS	270000(NTSC)　320000(PAL)
WORKING VOLTAGE	DC　12V
CURRENT CONSUMPTION	80MA
TELESCOPIC SHAFT LENGHT	310CM
CAMERA DIAMETER	23MM

MONITOR

MONITOR	3.5 INCH TFT	
PIXELS	480X300	
WORKING VOLTAGE	DC　12V	
CURRENT CONSUMPTION	300MA	
MONITOR SIZE	150X126X27（MM）	
STORE TEMPERATURE	-20℃ TO + 85℃	
OPERATING TEMPERATURE	0℃ TO + 70℃	

TELESCOPIC SHAFT

TELESCOPIC SHAFT LENGTH OF SHRINK	90CM	
TELESCOPIC SHAFT LENGTH OF STRETCHING	240CM	

BATTERY

BATTERY CAPACITY	2200MAH	
INPUT VOLTAGE	DC 12V	

CAUTION：

1. TAKE THE PROTECTING JACKET OFF BEFORE USE
2. WHEN CLEAN THE CAMERA PLEASE DO IT CAREFULLY.
3. CAMERA TELESCOPIC SHAFT AND HANDLE MUST BE SCREW DOWN THAT AVOID THE VAPOR GO INTO THE DEVICE
4. POWER SUPPLY IS 12V DC, 24V WILL DEMAGE THE DEVICE

PART LIST

1.	CAMERA	1
2.	TELESCOPIC SHAFT	1
3.	MONITOR	1
4.	MONITOR BRACKET	1
5.	HANDLE	1
6.	2200MA BETTERY（2PCS）	2
7.	CHARGER BASE & ADAPTER	1
8.	INSTRUCTION MANUAL	1
9.	ALUMINIUM CASE	1